 
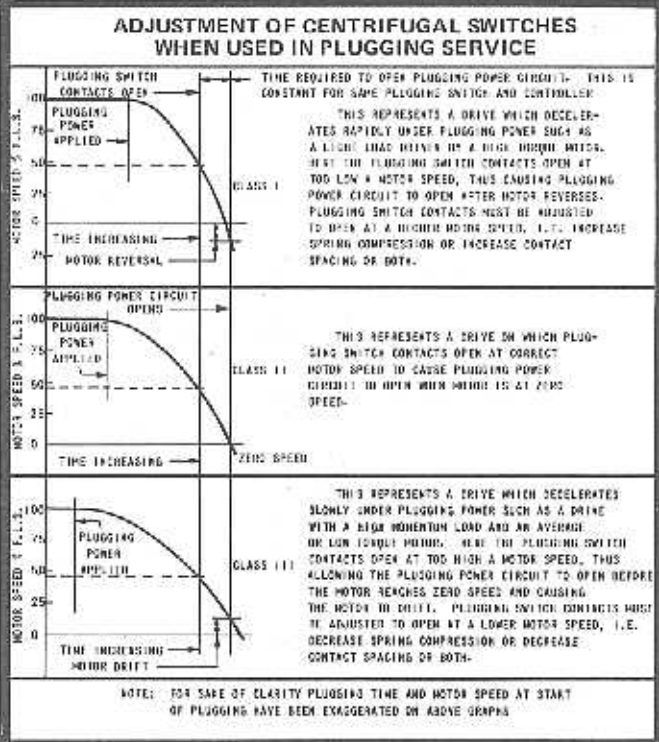 
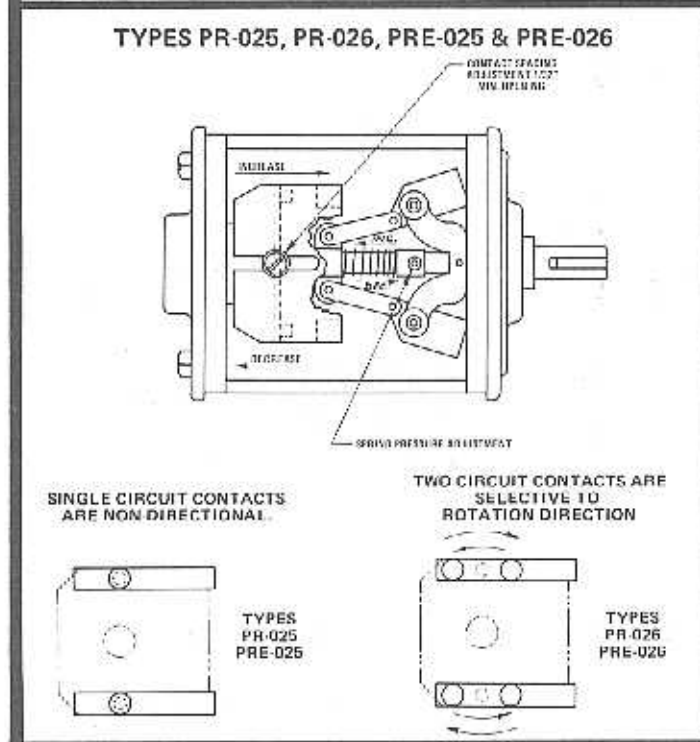 
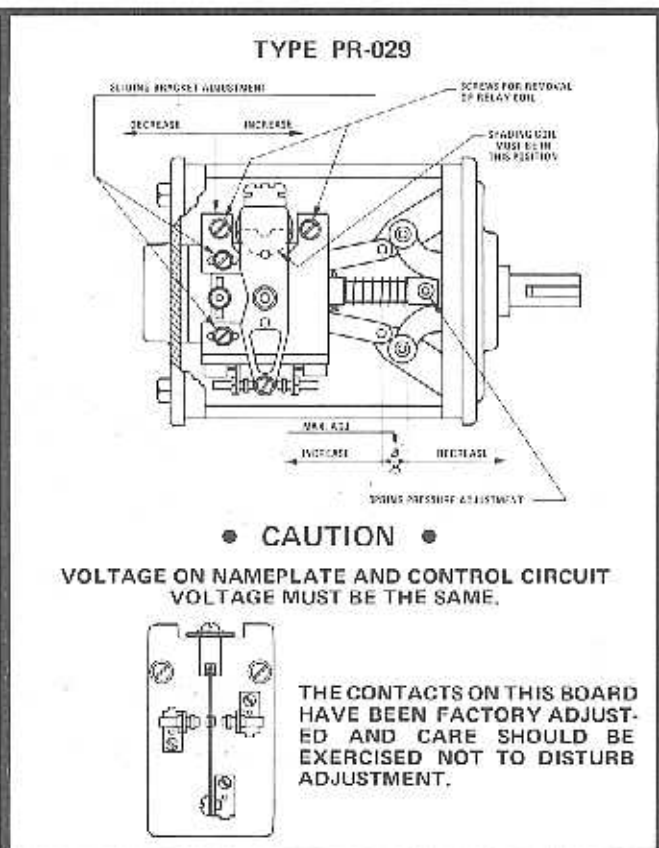 


# HUBBELL P. R. CENTRIFUGAL SWITCH

Instruction Sheet

2200

 
February, 1974

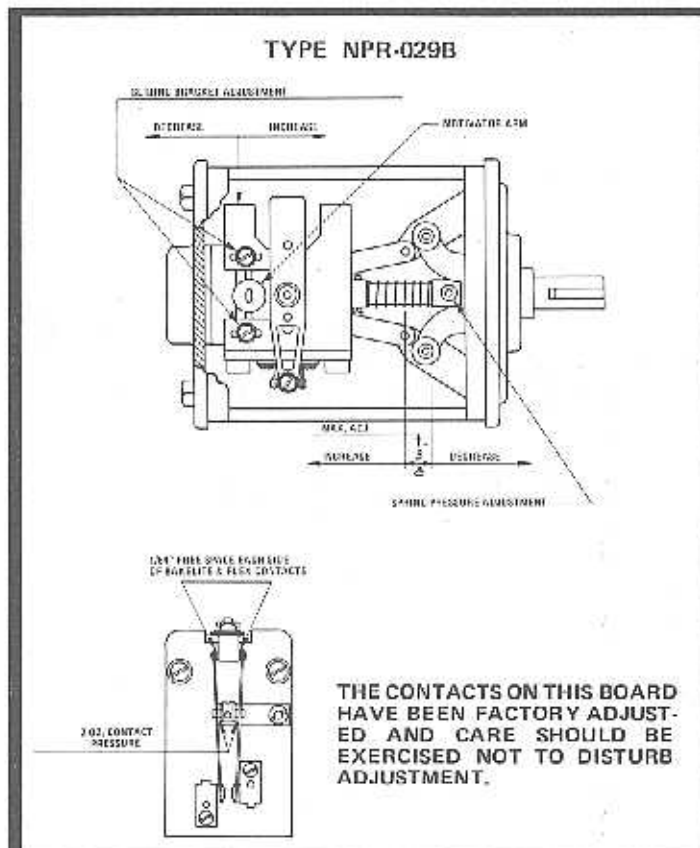


industrial controls division

Printed in U.S.A.


TYPES PRD-025 & PRS-025

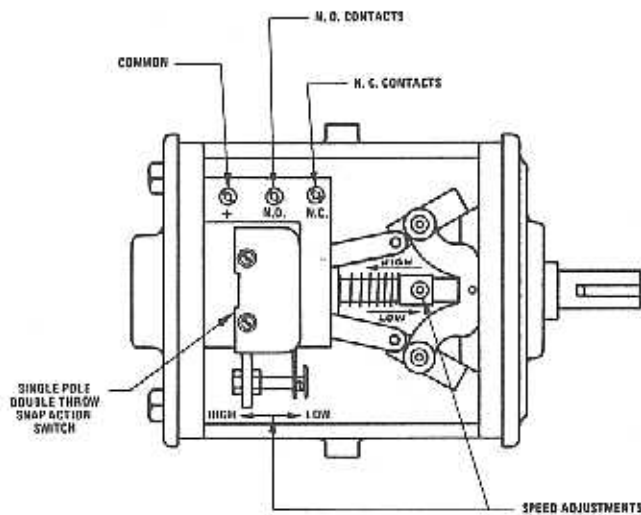


TYPES PRD-031 & PRS-031

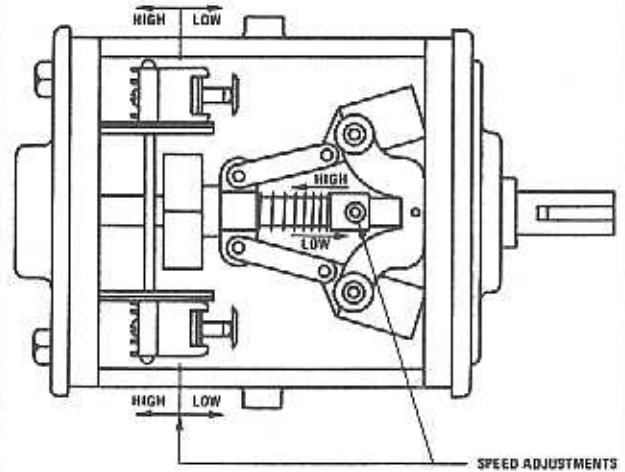 

TYPES PRD-031B & PRS-031B

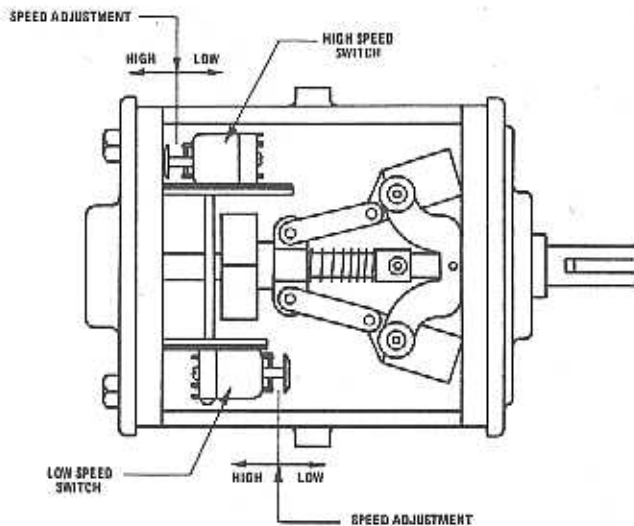 

TYPE PRS-038M

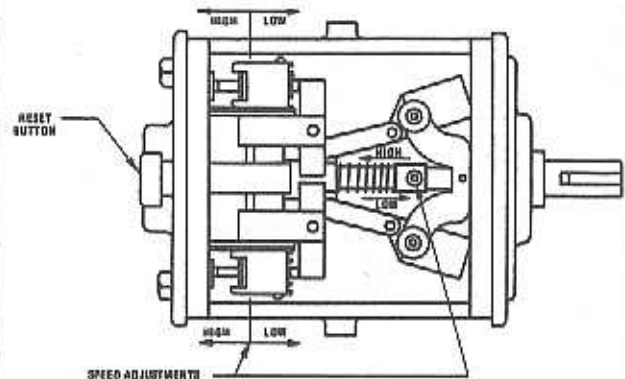 

## INSTALLATION

HUBBELL switches should be properly aligned and mounted on a smooth flat surface by means of mounting bolts through the mounting holes provided in the mounting holes in the flange to permit proper alignment. If extreme vibration conditions exist, doweling of the switch mounting is recommended. When direct connecting these switches to a

mating shaft, a suitable resilient separator type coupling must be used.

## MAINTENANCE INSTRUCTIONS

Lubricate flyweight assembly with light oil, holes provided. Keep shaft clean and free from gum where sleeve bearings slide. All ball bearings are sealed and are permanently lubricated.